CLEANING TIPS FOR
THE DANI

battery-free ganz

WHEN SHOULD I CLEAN MY DANI?

Feel poor airflow

After combustion

Taste bad flavor

HOW TO CLEAN YOUR DANI?

STEP 1

Disassemble your Dani.

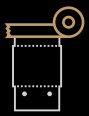

STEP 2

Use waterproof tape to cover the hole on the top of the cap to protect the thermal disc.

STEP 3

Choose a proper cleaning solution for each material.

WOOD: water only, and use a paper towel or soft cloth to blot away liquid immediately. You could use wax to stir the surface of the wood to get a beautiful finish again.

METAL AND GLASS: water + soap; alcohol; make sure you will use a paper towel or soft cloth to make it dry after cleaning.

Use cotton swabs or a straw cleaning brush to clean “inside” parts.



You could soak all metal and glass parts in the cleaning solution for a few hours or use it with an ultrasonic cleanser for a few minutes.